


## SR-150 THROUGH SR-500 TEST BENCH SETUP

When performing maintenance on a SR-150,160,400 or 500 I set the antenna selector (rear of the rig) to the SEPERATE position. Then I connect the signal generator to the REC ONLY jack and the Wattmeter and dummy load to the COMMON connector. That way I do not have to swap cables and worry about inadvertently transmitting into my signal generator.

Then I plug a telegraph key Into the KEY jack in the rear of the rig. Then when in MOX and CW positions and the telegraph key is not pressed you are in the receive function and can make receiver adjustments. When you press the key you automatically shift to the tx mode and can make transmitter observations. This keeps the tx duty cycle very short because you don't inadvertently leave the rig in the CW keyed mode too long. It also saves wear and tear on the FUNCTION switch.

**This area typical for SR-150, 160, 400 & 500**

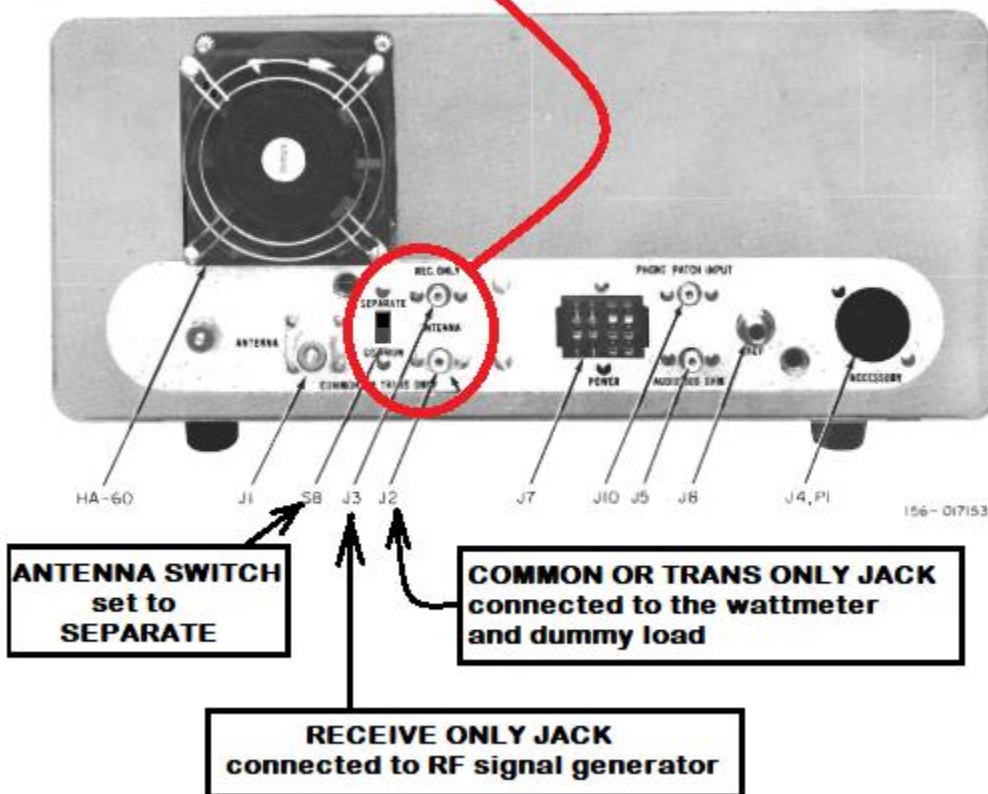

# TYPICAL BENCH SETUP

